

## Velodyne - UltraCoach VR Commands

To use the Velodyne with the Fitcentrix software, install the Fitcentrix software on your PC, connect the RS-232 cable and use the Selectable Grade mode on the Velodyne. Press Start to begin.

The following commands are supported and listed for reference only:

XXX is user weight in pounds.

G-YYY      YY.Y is Grade (plus is space, negative - )

R            Requests current speed.

S            Starts Velodyne

T            Stops Velodyne

O            Turns on Windload

F            Turns off Windload

All commands are uppercase and end with a carriage return. Baud rate is 9600,8,n,1.

When using Fitcentrix Software, these commands are used to adjust the Velodyne load. If you wish to connect your Velodyne to another computer and control it, the new system must support these commands.

You can test the connection by using terminal program set for a direct connection (like Hyperterminal) on your PC. The above commands will work from the terminal program.